RadioShack®
www.radioshack.com℠

Electronic Bartender

USER'S GUIDE —
Please read before using this equipment.

63-1161

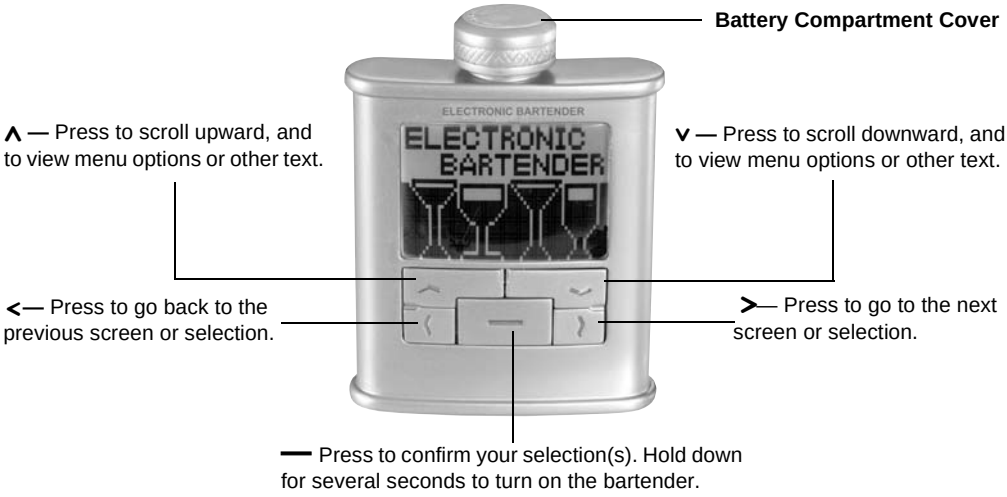

Thank you for purchasing the RadioShack Electronic Bartender. It includes more than 500 cocktail recipes, common bar measurements, suggested serving occasions, drinks to serve with food, and more! A blood level alcohol calculator is also included to calculate your blood level alcohol percentage based on your weight, number of drinks, and time of your last drink.

USING THE ELECTRONIC BARTENDER

Your bartender comes with two batteries installed and a protective insulation strip. To remove the insulation strip, rotate the battery compartment cover counterclockwise to remove it, grasp the strip's end, and gently pull to remove it. Replace the battery compartment cover.

1. Hold down — to turn on the unit.
2. Press — again. The MAIN MENU appears.
3. Press ∨ to view and select one of the following options:

DRINKS — Search for a drink by name, liquor, occasion, or category. See "Drinks " for details.

SETTING UP — Lists items needed to set up your bar, including types of alcohol, mixers, garnishes, and bar tools.

MEASURES — Standard and metric bar measurements and their equivalencies are listed.

MIXERS + MODIFIERS — Lists mixers and modifiers that are added for taste. Common mixers include juice, soda, and tonic water. Common modifiers include bitters, flavored syrup, and grenadine.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — **Warning** **Note** — **Caution**

© 2004 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

NOTE

- Only DRINKS and BLOOD ALCOHOL LEVEL CALCULATOR contain detailed search features. All other options on the MAIN MENU simply list information to be read.
- If no buttons are pressed within about four minutes, the bartender automatically turns off to conserve battery power. Hold down — to turn the bartender back on.
- Press < at any time during a search to go back to the previous menu.
- Drinks that start with a number are listed under letter A.
- If the display locks up or dims, use a sharp, pointed item to press **RESET** on the back of the bartender.
- The DRINK INFORMATION screen appears with the same options to select for each drink, no matter how you chose to search for it.

FOOD + DRINK — Suggestions are provided food and drink pairings. It includes wines, liquors, and other drinks that pair well with specific foods, and whether the drink is served before, during, or after the meal.

SLANG — More than 100 common bartender terms are listed and defined.

BLOOD ALCOHOL LEVEL CALCULATOR – See “Using the Blood Alcohol Level Calculator” on Page 3.

DRINKS

You can search for a drink by name, liquor, occasion, or category. Upon finding your drink, you can view its ingredients, recipe, occasions to serve it, and so on.

1. Highlight DRINKS on the MAIN MENU and press —. The DRINKS menu appears with the following options from which to select: Name, Category, Liquor, and Occasion.

Name

1. From the DRINKS menu, press ∧ or ∨ to highlight NAME. Then, press —.
2. Press ∧, ∨, >, or < to highlight the first letter of the drink to search for, and then press —. For example, to search for the drink named “White Russian”, highlight W, and press —. All drinks that start with W appear.
3. Press ∧ or ∨ to highlight the desired drink from the list, and press —. The DRINK INFORMATION screen appears with the following options from which to select:

   Category — The category of the drink appears. For example, a daiquiri is categorized as a cocktail.

   Glass Type — The type(s) of glass in which to serve the drink are listed.

   Occasion — Common occasions or events at which this drink is served are listed.

   Recipe — The ingredients (with quantities) are listed.

   Technique — Instructions on how to mix and prepare the drink are given.

4. Press ∧ or ∨ to highlight an option, and then press —.

By Category

1. From the DRINKS menu, press ∧ or ∨ to highlight CATEGORY.
2. Press —. A screen appears with a list of 14 categories from which to select.
3. Press ∧ or ∨ to highlight a category, and press —.

4. All drinks in the selected category appear. For example, if you selected **FROZEN DRINKS**, your list will include pina colada, frozen daiquiri, and so on.
5. Press ∧ or ∨ to highlight your desired drink, and press —. The **DRINK INFORMATION** screen appears.
6. Press ∧ or ∨ to highlight your selection, and press —.

By Liquor

1. From the **DRINKS** menu, press ∧ or ∨ to highlight **LIQUOR**. Then, press —.
2. Press ∧, ∨, >, or < to highlight the first letter of the desired liquor, and then press —.
3. Press ∧ or ∨ to highlight your desired liquor, and press — . All drinks containing that liquor are listed.
4. Press ∧ or ∨ to highlight your desired drink, and press —. The **DRINK INFORMATION** screen appears.
5. Press ∧ or ∨ to highlight your selection, and press —.

By Occasion

1. From the **DRINKS** menu, press ∧ or ∨ to highlight **OCCASION**. Then, press —.
2. Press ∧ or ∨ to highlight an occasion, and then press —. Drinks commonly served on that occasion are listed.
3. Press ∧ or ∨ to highlight the desired drink, and press —. The **DRINK INFORMATION** appears.
4. Press ∧ or ∨ to highlight your selection, and press —.

NOTE

Since some drinks contain more than one type of liquor, those drinks are listed under each liquor it contains. For example, a "Zombie" contains 151 Proof Rum, Creme De Noyaux, Triple Sec (tequila), and Light Rum. You can perform a search using any of those liquors and "Zombie" will appear in the list

USING THE BLOOD ALCOHOL LEVEL CALCULATOR

1. From the **MAIN MENU**, press ∧ or ∨ to highlight **Blood Alcohol Level Calculator**. ⚠
2. Press —. Basic information regarding the blood level alcohol calculator is written here. Press ∨ to scroll down and read the entire message. When you reach the end, the **WEIGHT** screen automatically appears.
3. Press ∧ or ∨ to highlight the weight closest to your actual body weight. Weights are listed in 20 pound increments from 100 to 240 pounds.
4. Press — . The **1 DRINK** screen appears. This screen lists the measured amount and type of liquor (beer, wine, hard liquor) that are considered to be one drink.
5. Press ∨ until the the **NO. DRINKS** screen appears.

⚠ WARNING ⚠

- The Blood Alcohol Level Calculator is for entertainment purposes only and should not be used to measure your legal level of intoxication.
- Caution should always be exercised to limit alcohol consumption, and to adhere to all local sobriety laws.
- Never Drink and Drive!

BATTERY NOTES

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the product for several weeks, remove the batteries.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

NOTE

Care

Keep the bartender dry; if it gets wet, wipe it dry immediately. Use and store the bartender only in room temperature environments. Handle the bartender carefully; do not drop it. Keep it away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new. If your bartender is not performing as it should, take it to your local RadioShack store for assistance. Use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack. Modifying or tampering with the bartender's internal components can cause malfunction or invalidate its warranty.

6. Press ∧ or ∨ to highlight the number of drinks (up to 10) you consumed within the last 26 hours, and press —. The LAST DRINK list appears.
7. Press ∧ or ∨ to highlight the approximate time (40MIN to 26HR) since you finished your last drink.
8. Press —. Your Estimated Blood Alcohol Level percentage appears.

REPLACING THE BATTERIES

If the display dims or the bartender stops working properly, replace the batteries.

1. Rotate the battery compartment cover counterclockwise to remove it.
2. Pull the battery chamber upwards and remove the old batteries.
3. Insert two new batteries, positive (+) side up.
4. Replace the battery compartment cover.

SPECIFICATIONS

Power Source	Two AG10 batteries
Operating Temperature	32°F to 122°F (0°C to 50°C)
Battery Life (continuous use)	40 hours
Dimensions (HWD)	3.1 x 0.86 x 4 inches (79 x 22 x 103 mm)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice. Product depictions found in this document may vary from actual product.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

03A04
Printed in China
63-1161